 





linea
BERTOMANI[®]
DECO SINCE 1946

Deurbellen Sonnettes Bells




Deurbeldrukker
Bouton de sonnette
Bell pushbutton

A	REF.	EAN	O.U.
53	8310EL.46-011	0083532089385	1 x1
54	8310EL.99-011	0083532024034	1 x1

 


Deurbeldrukker
Bouton de sonnette
Bell pushbutton

A	B	REF.	EAN	O.U.
32	62	8304EL.46-011	0083532094303	1 x1
32	62	8304EL.99-011	0083532024126	1 x1

 


Deurbeldrukker
Bouton de sonnette
Bell pushbutton

A	REF.	EAN	O.U.
50	4018EL.2-003	0083532087503	1 x1

 


Deurbeldrukker
Bouton de sonnette
Bell pushbutton

A	REF.	EAN	O.U.
50	932EL.2-003	0083532065990	1 x1

 

Deurbeldrukker
Bouton de sonnette
Bell pushbutton

A	B	REF.	EAN	O.U.
72	85	807EL.2-003	0083532085325	1 x1

 

Deurbeldrukker
Bouton de sonnette
Bell pushbutton

A	B	REF.	EAN	O.U.
29	69	19EL.1-003	0083532052945	1 x1



Beldrukker
Bouton de sonnette
Bell pushbutton

A	REF.	EAN	O.U.
20	10.37-002	0083532001974	5 x1